

QUICK INSTALLATION GUIDE



AirEye®

**READ AND SAVE
THESE INSTRUCTIONS**



Operating Instructions and Maintenance:
bigfans.com/support



⚠ CAUTION: To reduce risk of personal injury, use only with mounting assembly models 007180, 007262, 009182, 007265, and 008001 manufactured by Big Fans.

TECHNICAL SPECIFICATIONS

AirEye 100–120 VAC, 1Φ, 50/60 Hz

Fan Size	Motor Size	Max RPM @ 115 V	Fan Weight*	100 V		115 V		120 V	
				Current	Power	Current	Power	Current	Power
20 in. (508 mm)	1/3 hp	1300	32 lb (14.5 kg)	5.0 A	317 W	4.7 A	326 W	4.5 A	326 W
24 in. (610 mm)	1/3 hp	1300	38 lb (17.2 kg)	5.4 A	348 W	4.8 A	334 W	4.8 A	351 W
30 in. (762 mm)	1/3 hp	1300	45 lb (20.4 kg)	5.3 A	335 W	4.9 A	345 W	4.7 A	347 W


*Includes fan motor, blades, and cage assembly.

AirEye 200–240 VAC, 1Φ, 50/60 Hz

Fan Size	Motor Size	Max RPM @ 115 V	Fan Weight*	220 V		235 V		240 V	
				Current	Power	Current	Power	Current	Power
20 in. (508 mm)	1/3 hp	1300	32 lb (14.5 kg)	3.0 A	394 W	3.1 A	389 W	3.2 A	376 W
24 in. (610 mm)	1/3 hp	1300	38 lb (17.2 kg)	3.1 A	380 W	3.0 A	393 W	3.1 A	393 W
30 in. (762 mm)	1/3 hp	1300	45 lb (20.4 kg)	3.0 A	364 W	3.0 A	379 W	3.0 A	380 W

*Includes fan motor, blades, and cage assembly.


PARTS AND HARDWARE

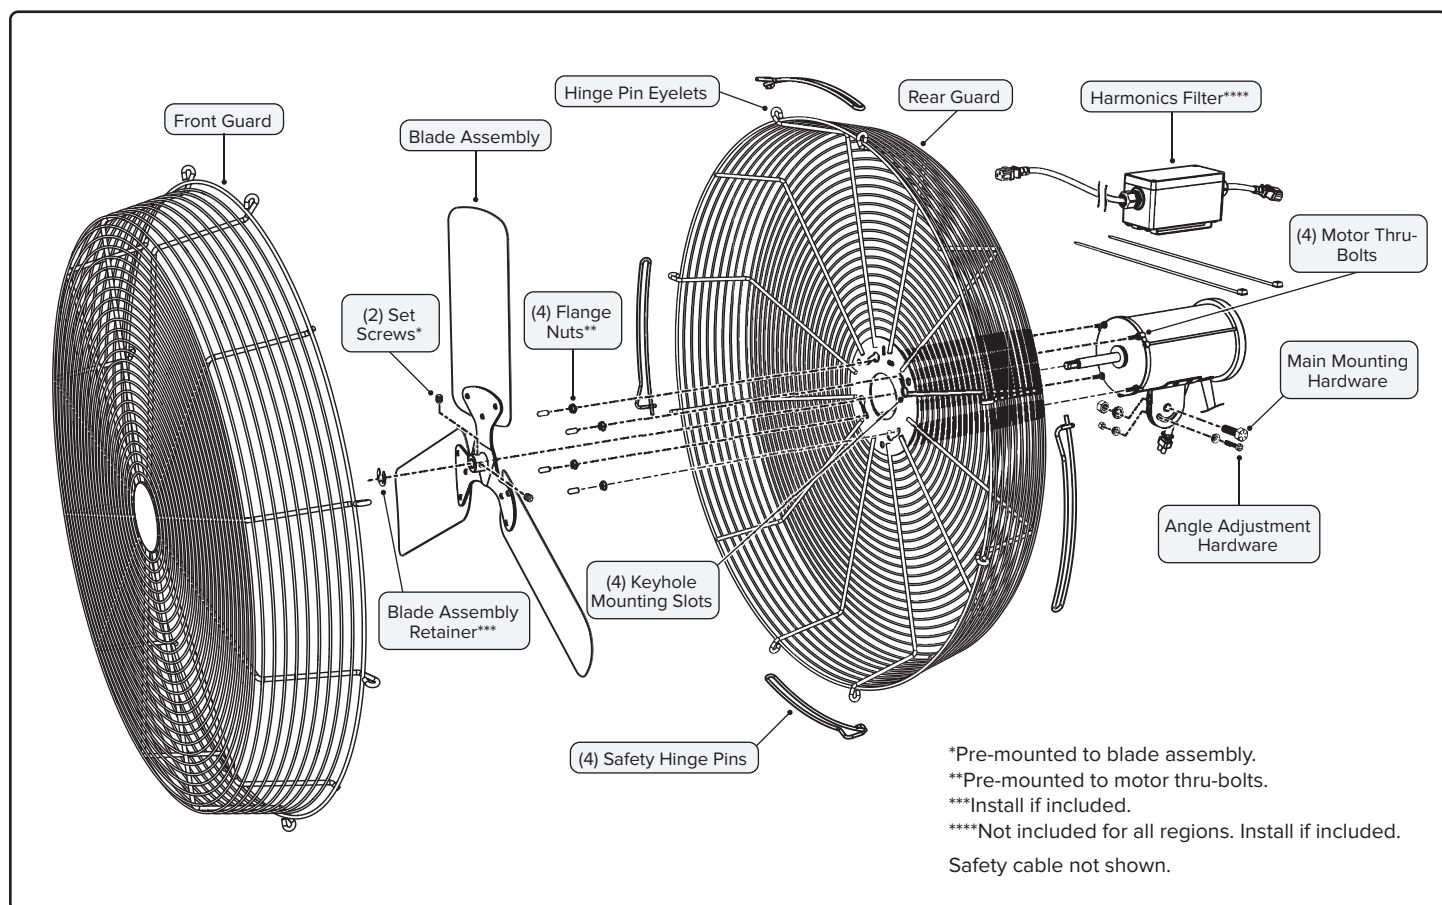

1. MOTOR


Make sure fan mount has been installed as specified in the mounting instructions.

To adjust motor angle, loosen main mounting bolt and angle adjustment bolt.

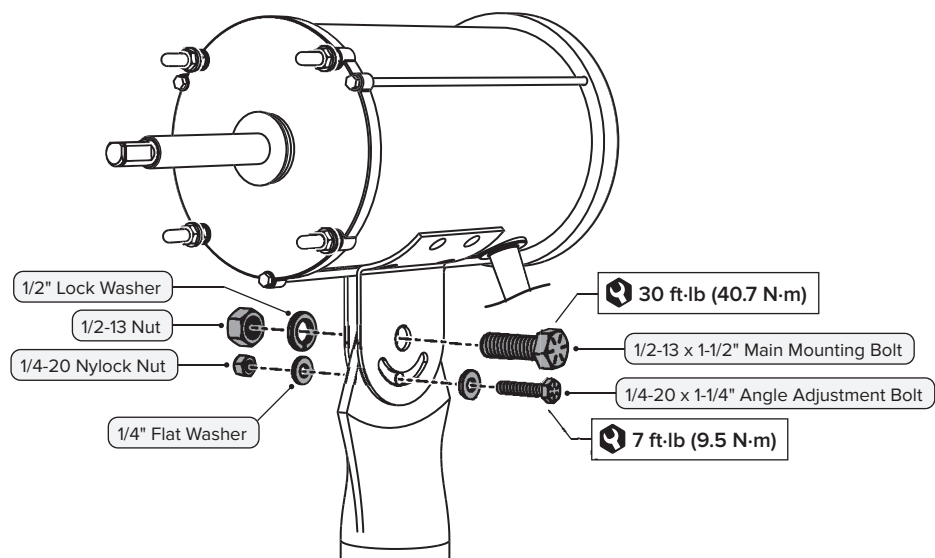


2. REAR GUARD

Align Mounting Slots

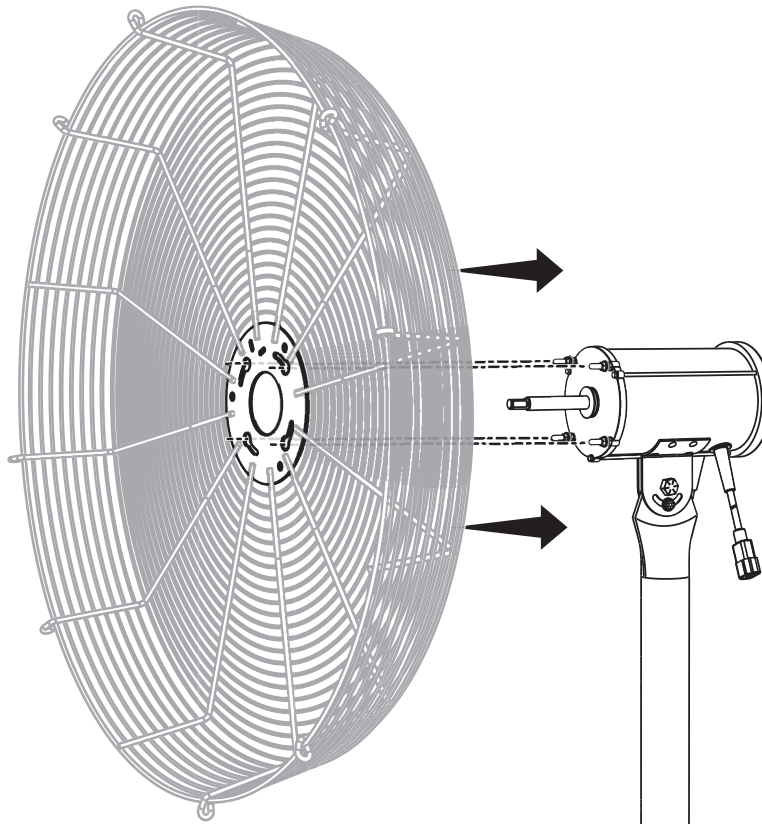


Secure Guard

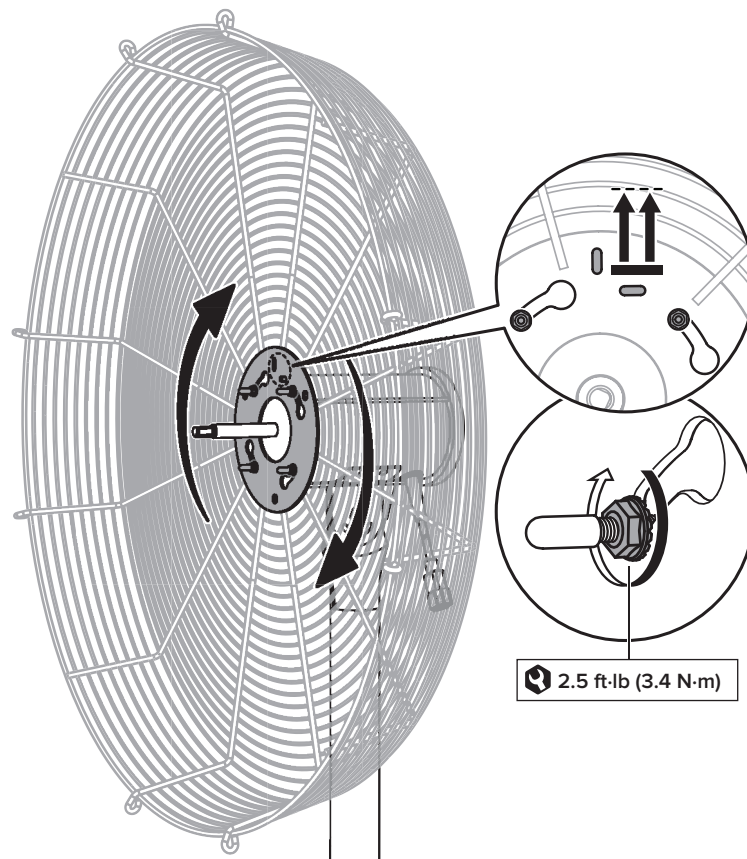

3. BLADE ASSEMBLY


Ensure blade assembly is fully seated onto shoulder of shaft and set screws are aligned to flats of shaft.

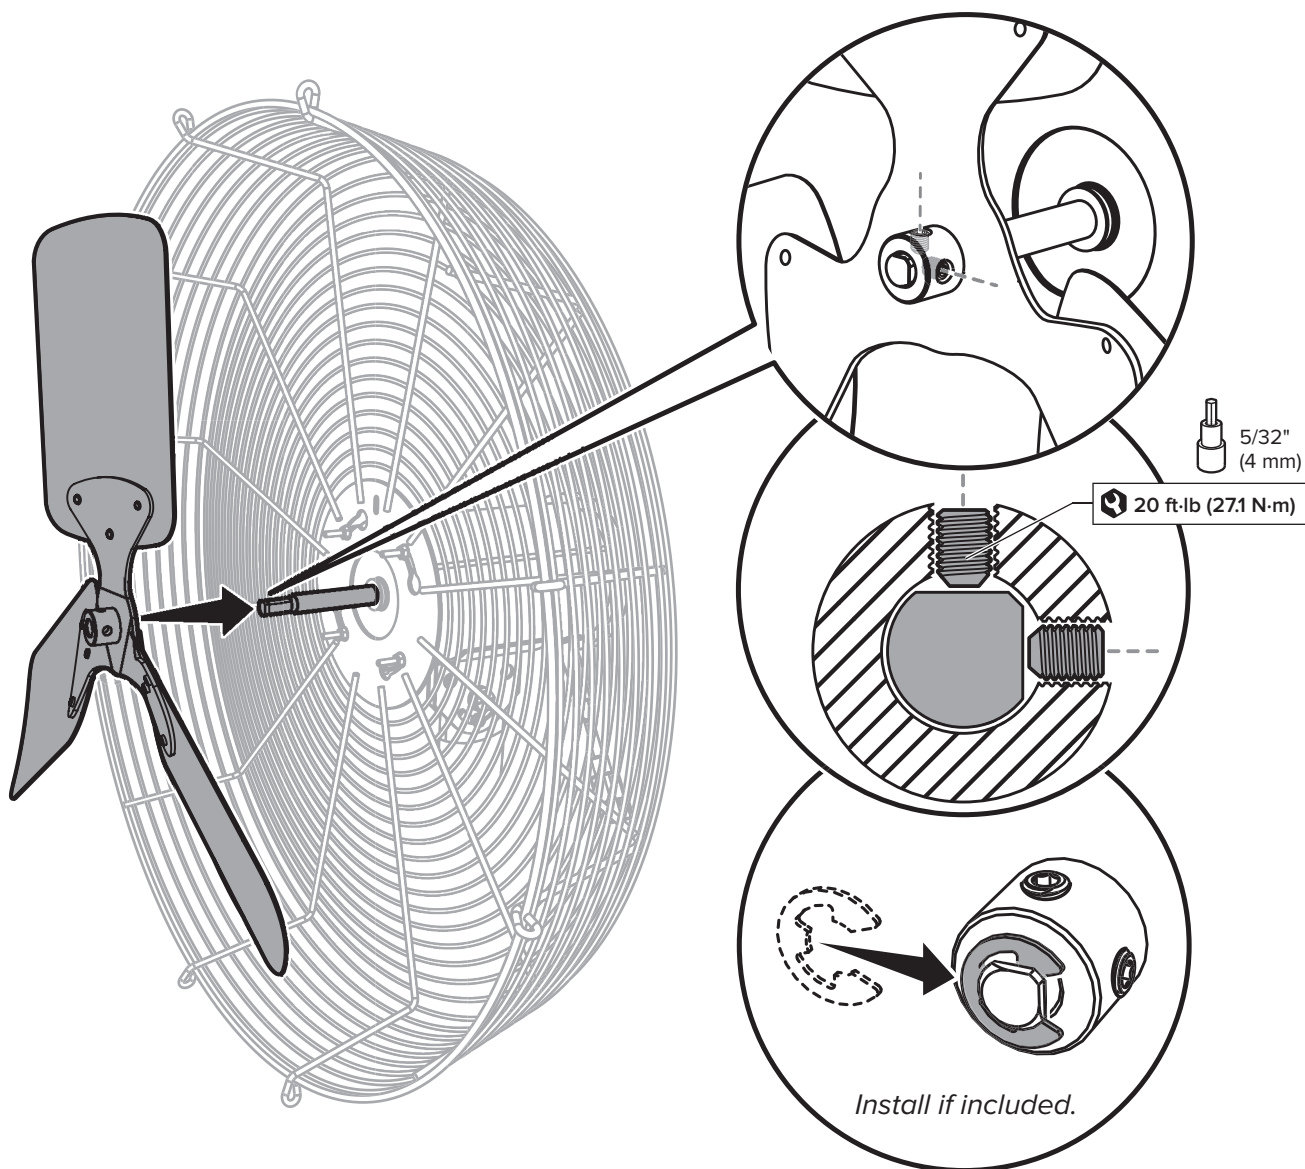

4. FRONT GUARD


If installing AirEye with Ion Technology, refer to the instructions that came with the ion generator before installing the front guard.

Align Eyelets

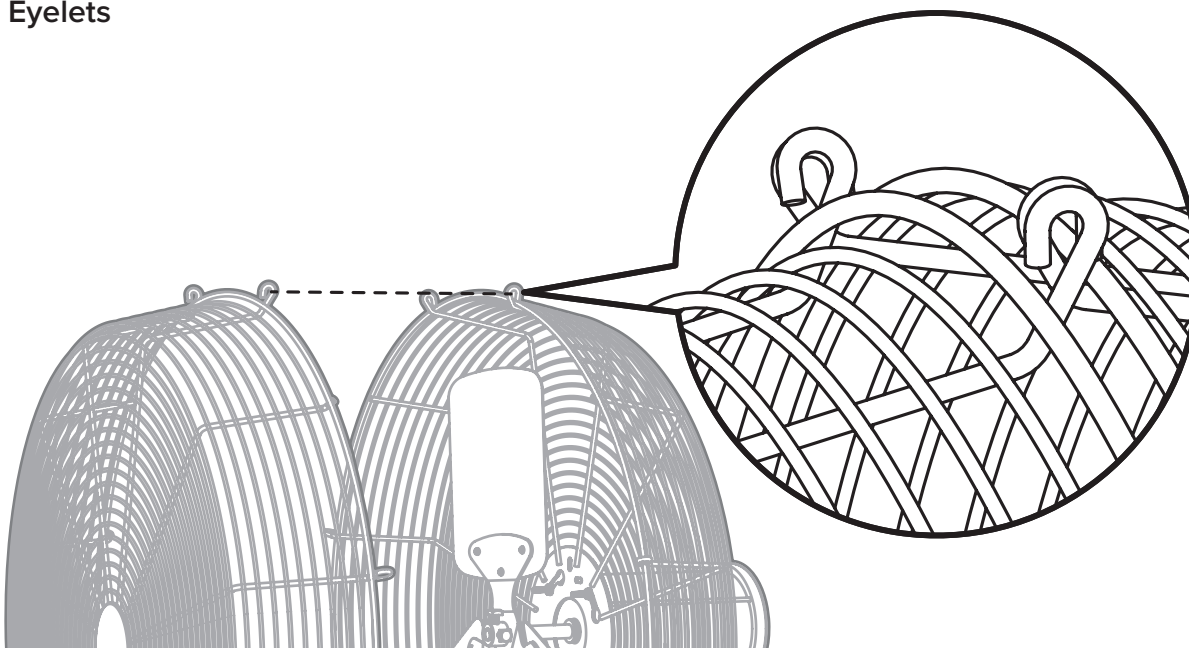


Fasten Hinge Pins

Start with topmost hinge.

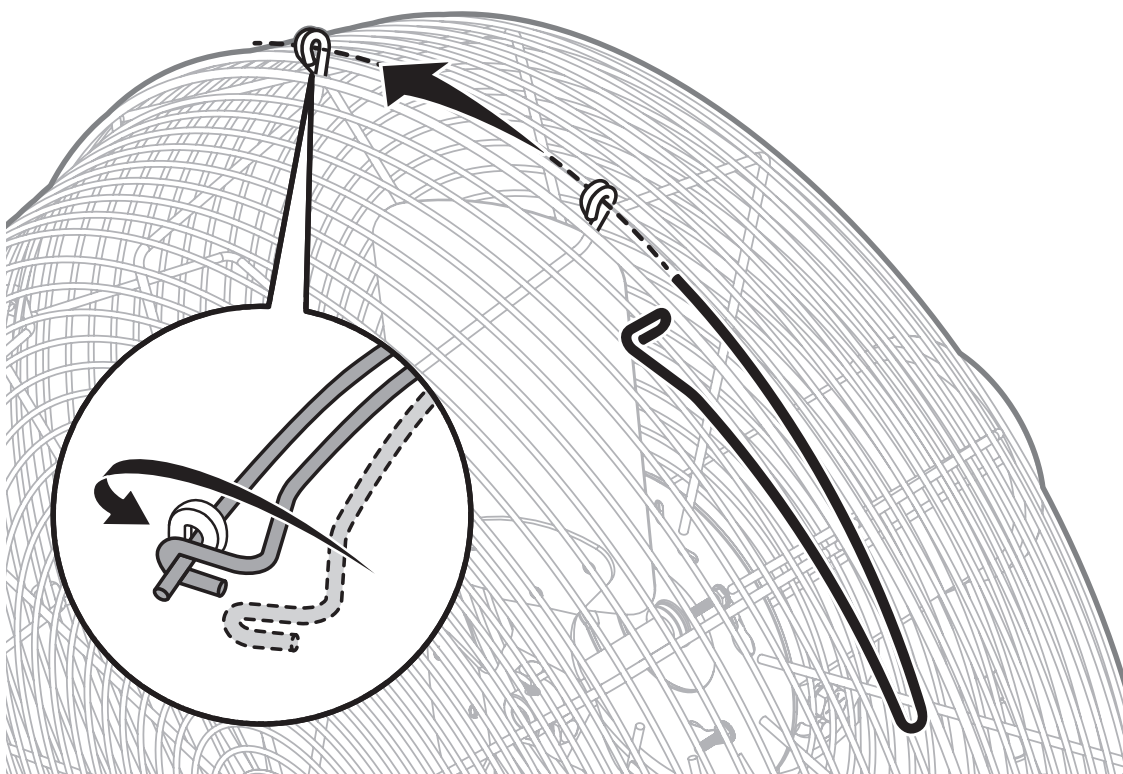


5. SAFETY CABLE

Do not attach safety cable to fan mount under any circumstances.

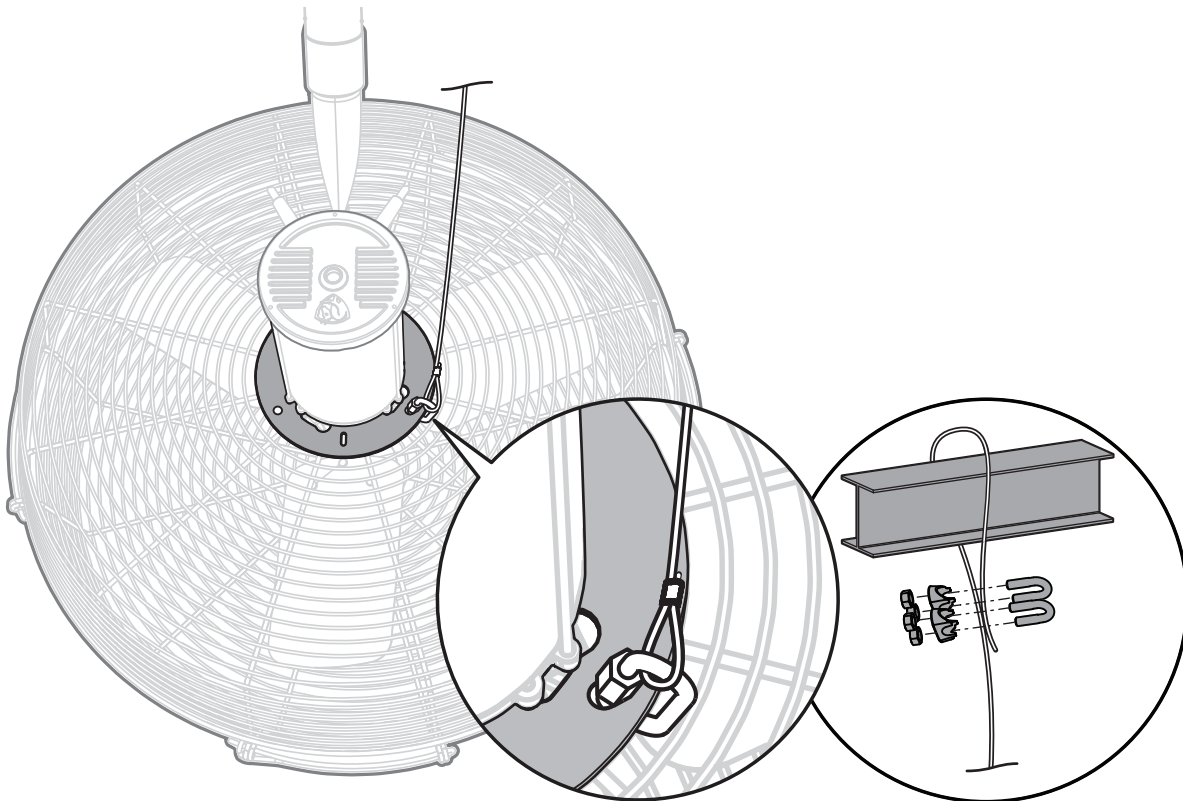


6. HARMONICS FILTER (SELECT REGIONS ONLY)


Install if included with your fan.

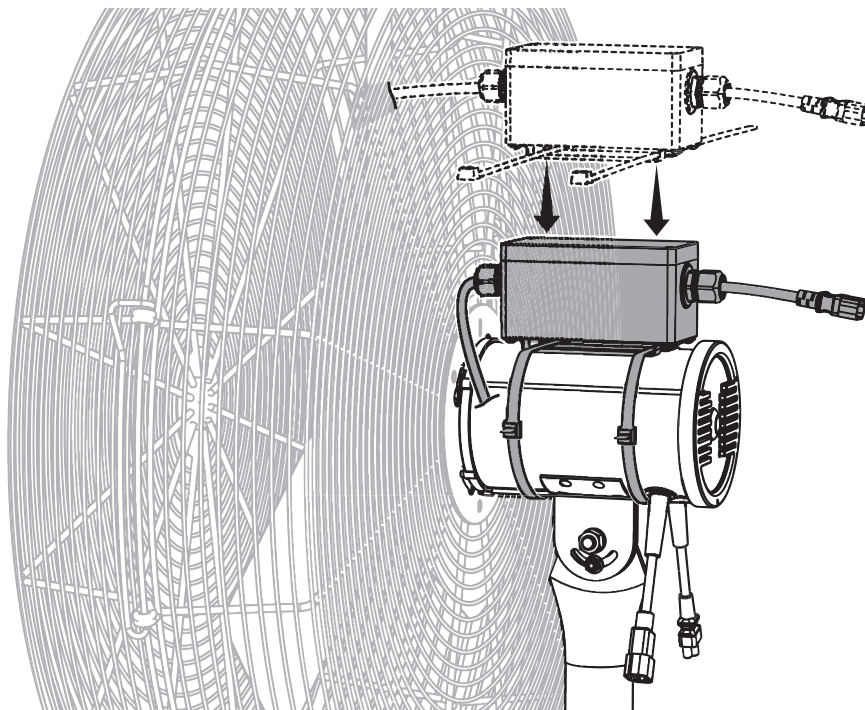


ELECTRICAL CONNECTIONS: FAN ONLY

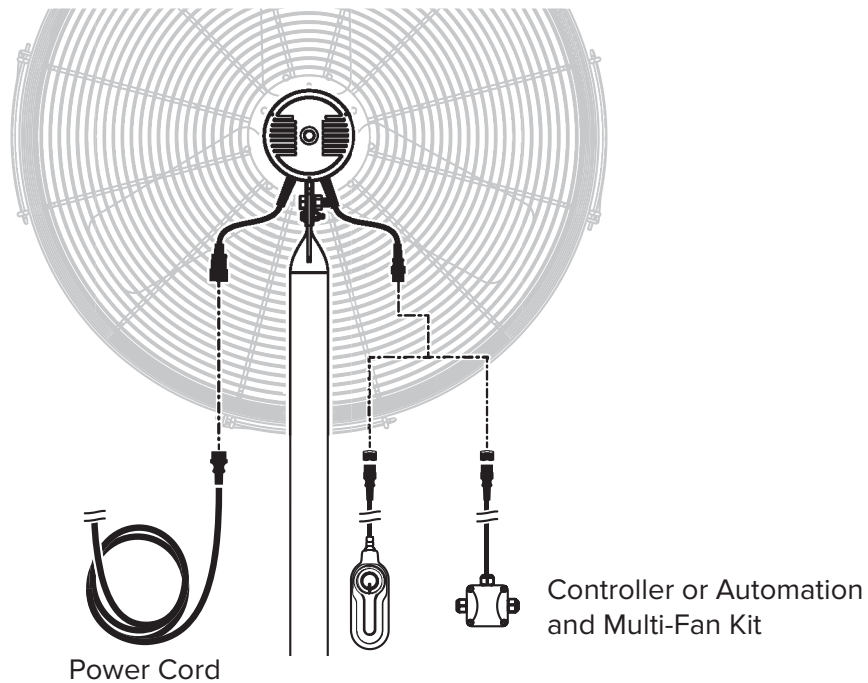

ELECTRICAL CONNECTIONS: FAN WITH OCCUPANCY SENSOR

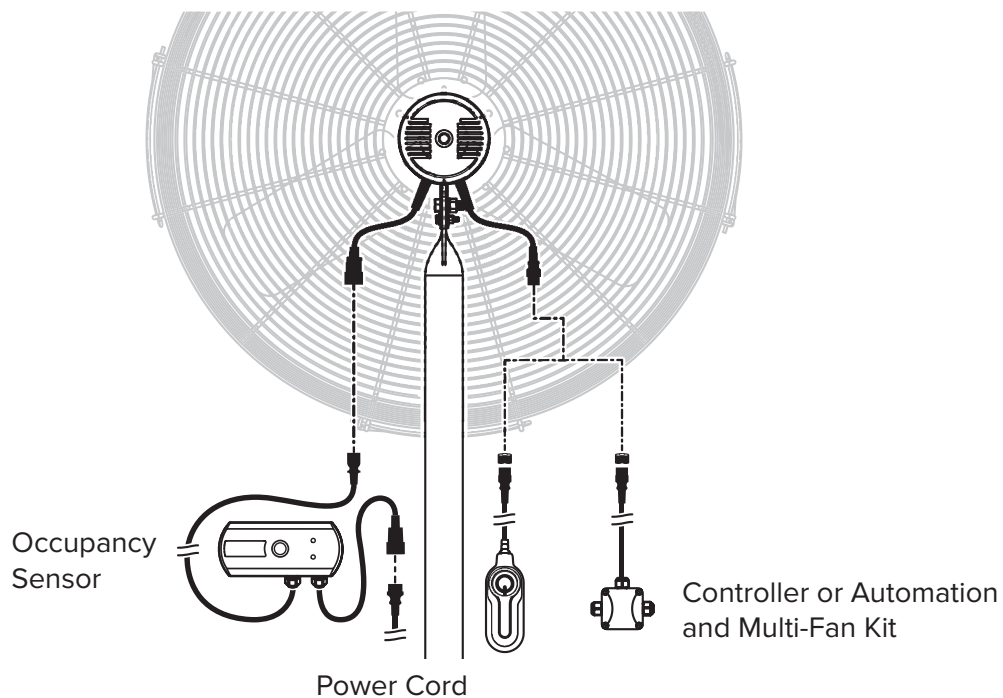

ELECTRICAL CONNECTIONS: FAN WITH HARMONICS FILTER

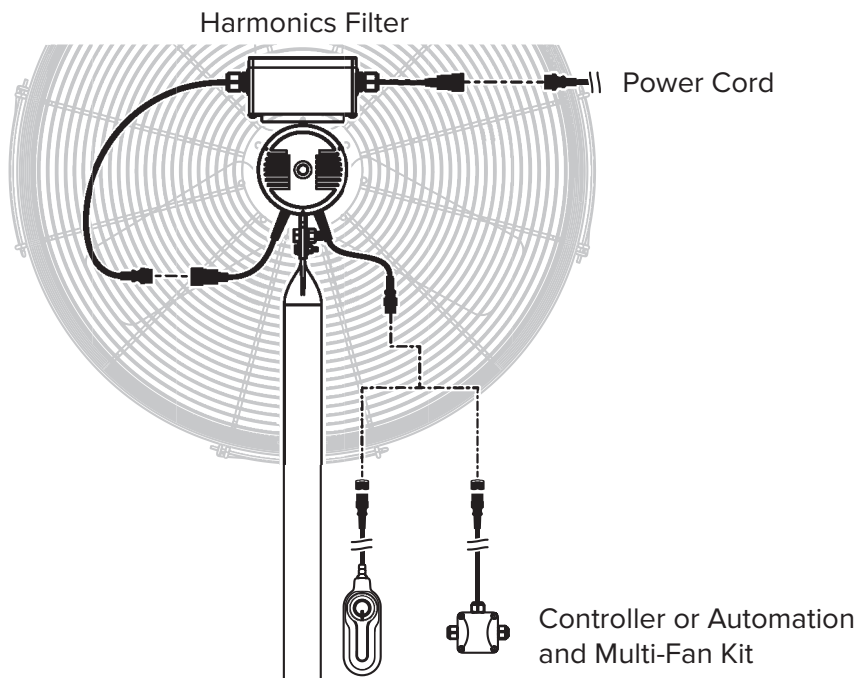

ELECTRICAL CONNECTIONS: FAN WITH OCCUPANCY SENSOR AND HARMONICS FILTER

